

LED Mini Mushroom

SPG005



User's Manual

I、PREFACE

Thank you for using our LED mini mushroom. For your safety, please read the User's Manual carefully before your operation.

Note:

This Manual includes the important information of installation、operation、safety instruction. Please install and operate as requested in the Manual, meanwhile, please keep the manual for any unexpected requirement.

This Manual includes the important information of installation and operation. Please install and operate the light according to the instructions strictly. And it must be power off when open the light or before repair.

- A: Please read the complete contents of this manual (please keep this manual attach with the light for any preview)
- B: In order to make sure the correct and safety installation、operation and maintenance, well know and follow to the instructions of Manual is necessary.
- C: We will not take any responsibility to the light damage、property loss or body injure which caused by the incorrect installation、operation and maintenance.

Notice:

The data which inside the Manual maybe changed due to the continuous Improvement and we'll not make another notice. We will keep the right to any Specification update during improvement

Warning:

If the protection screen、lens or UV screen got a visible damage, e.g.: Scratch or chasm.

1. Packing Content:

(Accessories)

- 1: Power Cable (1PCS)
- 2: Signal Cable (1PCS)
- 3: User's Manual (1PCS)

(Selectable)

- a: Bracket
- b: Clamp
- c: Safety Cable

2. Unpacking Instruction:

Please check if all the contents are completed after unpacking? then, check if the light is undamaged? Please you can keep the original package and return to the factory if it's damaged

3. AC Power:

Check if the voltage is accordance with the rated power.

4. Safety Specifications:

- 1) All the safety items of operation (includes installation) and before operating.
- 2) Unpacking the light case and take out all the accessories, and open the poly package, take out the light from the flight case, and put it in a certain platform for operation.
- 3) This device for indoor use only, the protection grade is: IP20. the light must keep dry and avoid to use under the Moist、Overheat or Dusty surroundings. And keep the light far away from the water or other liquid.
- 4) Installing of the light must keep a distance with any flammable objects by 1M at least.
- 5) Please never install the light on the surface of the flammable objects.
- 6) The installation、operation and maintenance must be managed by the qualified professional, and make sure to operate it under the instruction of the Manual.
- 7) Make sure the work environment temperature of the light maximum 45℃, and minimum -15℃
- 8) The temperature of the light surface will up to 130℃ even under the normal cooling, so never touch it by hand.
- 9) The light was designed by electric shock protection type, and must connect to the power supply system which well earthed. Furthermore, the ground wire of the light must connect to the ground wire of the power supply system, ground wire interface of the light must well connect with the light body(or light must well earthed)
- 10) Please check if the voltage is accordance with the rated power before installing.
- 11) Please never use the power cable which was damaged the insulation cover, meanwhile; never put the power cable on any other wire. Please pull out the power cable by handle the plug when light is stop working or cleaning, never pull out it roughly or handle the wire directly.
- 12) The light doesn't include any spare parts for repair, please check if all the
- 13) Parts are well installed and screws are drove tightly before operating. It's
- 14) Prohibited to use the light when the cover is opened.

Notice:

Please make sure it's power off before any installation、repair and clean!

、 INTRODUCTION

Technical Features

- Control channel: 9 DMX channels
- Color: RGB three basic color, color shade
- Operating modes: standard DMX512 controller control mode
- Other function: rotate angle 180o , master and slave mode, sound control
- Appearance: metal shell, streamlined designs.
- Working environment: indoor, -15 ℃ ~ 40 ℃
- IP degree: IP20

III、 TECHNOLOGY PARAMETER

- Voltage: AC220~240V 50Hz (110V-120V 60Hz, can be select)
- Power: 35W
- Fuse: F1A, 250VAC
- LED lamp: 6X3W (R2、 G2、 B2)
- Packing Size: 290×290×380mm
- N/W: 3Kg
- G/W: 3.6Kg

、 INSTALLATION

1. Install/Replace LED Lamp



First, after unscrewed the screw at the head of shell and then pull out it. You can see the LED. If found the LED are not bright, then replace them. Installation method is just the opposite.

Warning:

- 1: The light power supply must be disconnected when replacement of the LED does not bright
- 2: you can repair the light before you must use a thermostat with anti-static electric iron, and wear anti-static rings

2. Power Supply, Wire Connection

Using a dedicated plug to connect the LED mini mushroom light and power. LED mini mushroom should pay attention to whether the voltage and frequency between signs and on the power supply are the same or not. Suggested that each light has a separate power supply switch, this can be turned on or off at random for each LED mini mushroom. The LED mini mushroom selection of input voltage and frequency parameters as follows:

Voltage	AC220V~240V	Frequency	50Hz
Voltage	AC110V~240V	Frequency	60Hz

If the power cable is damaged, please contact the area agents or ask professional to replace; please use the same specification cable when you replace the power cable.
 Tip: When connecting the power, ground wire must (yellow / green color wire) safety ground, electrical installation must comply with all relevant standards.

3. Fixed Installation of Lighting (Including Light Hook And Safety Rope How To Use)



Hook Installation

Before positioned the light, ensure the stability of the installation site. In the reverse hanging installation, use two sets of M10 bolts with a professional big hook, link the hanging screw hole on the bottom of the light, must be ensure that the light will not fell down from support rack, through the support rack and light hand use the safety rope for auxiliary lifting handle to ensure safety, to prevent the light falling and sliding. Light in the installation, the bottom prohibit pedestrians. Safety rope regularly checked whether there is wear and tear, whether there is loose hook. The manufacturer does not take any responsibility if the light falling because hanging installation is not stable.

Warning:

- 1: Hook use only for light lifting.
- 2: Hook as a handle move the light to prohibit, carrying, please use the handle.

V、 OPERATION

1. DMX Address Code Setting

Every light should be set with DMX address code when you are using the controller to control multi lights; it is used to receive the signal from the controller. Since the product uses "address code dial code" set the address code, so each dial code corresponding to address values are as follows:

Dial code	1	2	3	4	5	6	7	8	9
Corresponding To Address Code Value	1	2	4	8	16	32	64	128	256



The present address code of the light = (address code of last light) + (channel quantity of the light). The light with 9 Channels, so it should be under the "16channel" control mode, the DMX address code of the first light is 1, the corresponding dial code is "1" (or all of the dial code not dial), the second should be: $1+16=17$, the corresponding dial code is "1 +5", the third light address value is $1+16 * 2 = 33$, the corresponding dial code is "1 +6 ", The fourth should be $1 +16 * 3 = 49$, the corresponding dial code is " 1 +5 +6 ", analogously.

2. Auto-mode

Dial the code 10 and 8 to ON, LED mini mushroom light in auto running mode. The dial codes 1, 2 and 3 are the conversion of the different modes of auto running. Following the list:

DIP Number	Function Description	Remark
10+8	Auto	Auto-running show (include shade、strobe、 change color and so on)
10+8+1	R Shade	
10+8+2	G Shade	
10+8+3	B Shade	
10+8+2+1	RGB Shade (Speed1fast)	
10+8+3+1	RGB Shade (Speed2)	
10+8+3+2	RGB Shade (Speed3slow)	
10+8+3+2+1	R+G+B Shade	

3. Sound Control Mode

Dial the code 10 and 7 to ON, LED mini mushroom light will be in sound control mode. The dial code 1、2、3、4 and 5 are the conversion of the different modes of sound control mode.

DIP number	Function	Remark
10+7	Sound Mode1	
10+7+1	2	
10+7+2	3	
10+7+3	4	
10+7+4	5	
10+7+5	6	

Setting master machine is when dial the code 10 to ON, control the slave machine can by DMX connect interface. All dial code to OFF, when dial 10 to OFF, 1 to 9 is the light address code setting (8421 binary code format), are all OFF, the address is 001.

4. Master-Slave Mode

Setup master machine and dial code 10 to ON, can control slave machine by DMX connect interface. All dial code to OFF when slave machine receiving; 1-9 is the light address code setup (8421 Binary encoding format) when dial 10 to OFF, the address code is 001 when all OFF.

Warm Tip:

The light auto running effect, are selected from the control channel with the proceeds, so users can use the DMX controller of have storage capabilities to make out the changers effect of your need.

Dip Number	Function Description	Remark
10+1	R	Fixed Color (Away Brightness)
10+2	G	
10+3	B	
10+2+1	R+G	
10+3+1	R+B	
10+3+2	G+B	
10+3+2+1	R+G+B	
10+8	Auto Running	Auto Running Show (Include Shade, Strobe, Change Color And So On)
10+8+1	R Shade	Shade
10+8+2	G Shade	
10+8+3	B Shade	
10+8+2+1	Rgb Shade (Speed 1 Fast)	
10+8+3+1	Rgb Shade (Speed 2 中)	

10+8+3+2	Rgb Shade (Speed 3 Slow)	Strobe
10+8+3+2+1	R+G+B Shade	
10+9	Rgb Change Each Other	
10+9+1	R Strobe	
10+9+2	G Strobe	
10+9+3	B Strobe	
10+9+4	R+B Strobe	
10+9+5	R+G Strobe	
10+9+6	G+B Strobe	
10+9+2+1	R+G+B Strobe(Speed Adjustment)	(Dip3-Dip7) Adjustment Strobe Speed
10+7	Sound Control1	
10+7+1	Sound Control2	
10+7+2	Sound Control3	
10+7+3	Sound Control4	
10+7+4	Sound Control5	
10+7+5	Sound Control6	


、 APPENDIX

1、 Usage of the Signal Cable、 Connector

The connection between the output and input, it's available to use the 3 pins XLR cable which provided by the manufacturer. Signal cable from the DMX output of the controller to the input of the first master light, and connect to the DMX input of second slave light from the DMX output of the first master light, analogously, till connected all the slave lights, and insert the last connector to the output of the final light.

If you want to prolong the connection of signal cable, the connection of the pins between male connector and female connector should be:1 to 1; 2 to 2; 3 to 3,or it will cause communication interruption. (Notice: the diameter of core of every cable should be 0.5mm at least, double core shelter cable should be used) .The signal connecting must use the attached 3 pins XLR cable. Notice, all the internal lead wire of the 3 pins XLR cable should not touch to each other or connect to the connector.

The light is available to receive the DMX512 signal, connect the signal plug to the panel which marked with "IN", and connect it to the next light. then, connect to the "IN" of next light from the "OUT". The DMX signal terminal organ is recommended when the lighting signal is connecting. It will avoid to damage the signal which caused by the noise, DMX terminal organ is a XLR connector, connect with a 120Ω resistor between the pin 2 and pin 3 of the XLR connector, and connect it to the last OUTPUT socket of the final light. Follow picture:

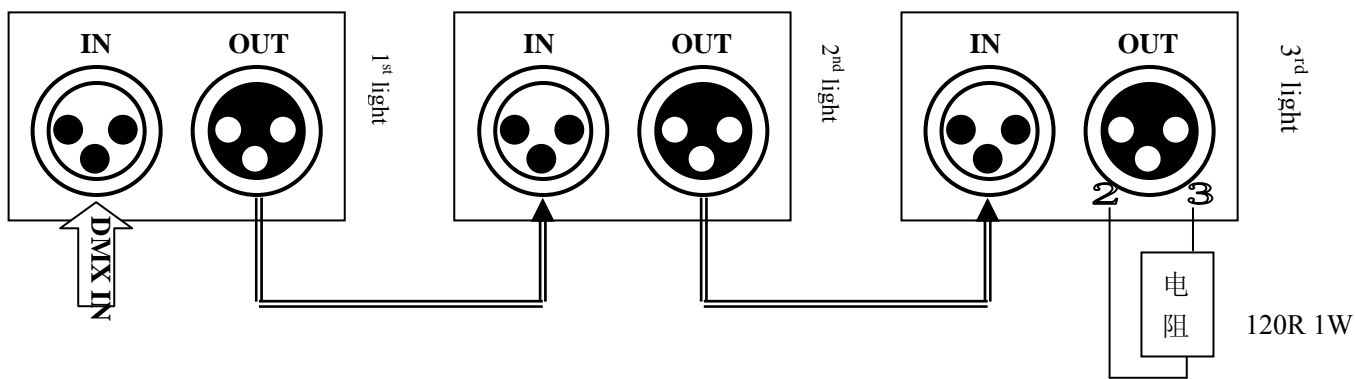

unitymall

2、DMX Channel Value List

After completion all operations, press the power switch check if everything is normal

Channel	Function	Value	Description	
CH1	Motor Function	0—15	Position (Adjust Position By CH2)	
		16—215	Rotate Come And Back (Adjust Range 16—255, Short—Long)	
CH2	Motor Speed/Position	0—255	Fast—Slow /Position(0—170degree)	
CH3	Dimmer/Strobe On Off	0—7	Off	
		8—232	Strobe (Slow----Fast)	
		233—255	On	
CH4	Strobe Space %	0—255	Adjust The Value, Obtain A Stronger Sense Of Visual Impact	
CH5	Fixed Color/Shade	0—17	None (CH6、CH7、CH8 Dimmer)	
		18—34	R+G+B	
		35—51	Red	
		50—68	Green	
		69—85	Blue	
		86—102	Yellow	
		103—119	Magenta	
		120—136	Cyan	
		137—153	Red Shade	Shading, Can Be Adjustment CH6 Change Speed
		154—170	Green Shade	
		171—187	Blue Shade	
		188—204	White Shade	
		205—221	Color Shade	
222—238	RGB Change			
239—255	RGB Shade			
CH6	Shade Speed	0—255	Fast—Slow (CH5 >137 Effective)	
	R Dimmer	0—255	R	
CH7	G Dimmer	0—255	G	
CH8	B Dimmer	0—255	B	
CH9	Off	0—19	OFF	
	Auto	20—39	Auto Running Mode1	
		40—59	Auto Running Mode2	
		60—79	Auto Running Mode3	
		80—99	Auto Running Mode4	
		100—119	Auto Running Mode5	
		120—139	Auto Running Mode6	
	Sound Control	140—159	Sound Mode1 R+G+B[White]Strobe	
		160—179	Sound Mode2 R Strobe	
		180—199	Sound Mode3 G Strobe	
		200—219	Sound Mode4 B Strobe	
		220—239	Sound Mode5	
240—255		Sound Mode6 Seven Color Jump Change		

、 MAINTENANCE

1. Clean and use frequency

To confirm the power supply have cut off before disconnect the light or repair it ,it is very important to keep the light cleaning .not only can keep the light maximum brightness output but also can prolong their use life . please use the high quality professional glass and soft cloth to clear up the equipment ,not permission to use the alcohol and organic liquid clean at least once each year use vacuum dust collector .

When the light does not start, check whether the light power supply fuse blown or not, if blow, install the appropriate fuse, and start the light after find out troubleshooting, but please attention to the technically person allowed to carry out maintenance work.

2. Products returned

If it is the products quality problem, the customer can be based on the actual situation, to decide whether need the product parts to replace.

3. Complain

- 1) The salesman will check the details of complained problem, included the item no、 delivered quantity、 delivery time、 faulty and pictures, and the requirement of customer
- 2) The customer service technicians to analyze and contact with customers by phone, to guide customer.
- 3) Quality Technology Department analysis of customer complaints and give a preliminary identified. The units must be offer analysis and treatment measures on time.

、 FAULTY DISPOSAL

Familiar Faulty	Disposal
Light Can Not Start	<ol style="list-style-type: none">1. Check If The Fuse Burnt Out Or Not2. Check If The Power Connect Well Or Not3. Check If The Circuit Board +12v Or +5v Short Circuit Of Earth
Light Can Be Shine Well, But Can Not Be Control By Controller	<ol style="list-style-type: none">1. Check If the Light'S Dmx Original Address Setup Right or Not. Check The Connection Details Of Communication Control Wire
5w White Led Not Brightness	<ol style="list-style-type: none">1、 Check If Led Lamp Damage Or Not

unitymall

unitymall

